









Base Cabinet Assembly Instruction


(Item:B09-B15)

Hardware list	1 4pcs		Ø4x16mm	2 2pcs		Ø4x19mm	3 20pcs		Ø3.5x14mm	4 16pcs		Ø3.5x16mm	5 1pc		Ø3.5x35mm	6 2pcs		1-1/4"	7 4pcs		6mm							
	Flat head screw			Round head screw			Color galvanized screw with flat head			Color galvanized screw with flat head			Black screw with flat head			Hinge			Shelf clips									
																												
Assembly tools required	 Screw driver			 Rubber mallet						11 4pcs			40mmx40mm	10 6pcs			Ø7	9 4set			L-shape bracket	8 1set		S30B53H10GA08				
										Bracket rainbow 90°			Bumper			L-shape bracket			Drawer slide									
																												
H		Drawer part																										
Cabinet Part List	A	Front frame			B	Side panel(2)			C	Bottom panel			D	Back panel			E	Toe kick panel			F	Adjustable shelf			G	Door		


Step 1 : With front frame (A) of cabinet lay down on clean and soft surface then put glue into groove.

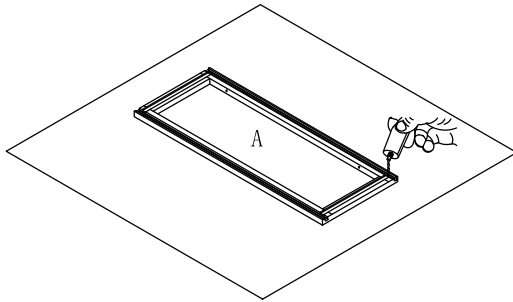


Step 2 : Install side panel. Insert both side panel (B) into groove of front frame (A) until side panel (B) and front frame (A) even.

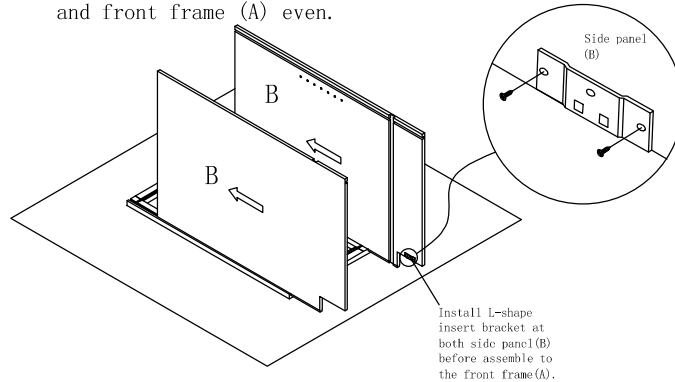


Step 3 : Install bottom panel. Insert the bottom panel (C) into groove of side panel (B) until it into the groove of front frame (A).

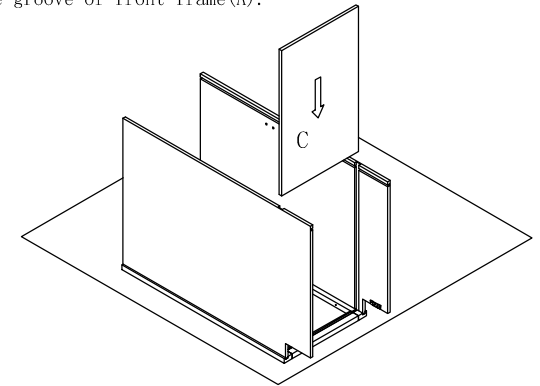


Step 4 : Install back panel. Insert back panel (D) into groove of left and right side panel (B).

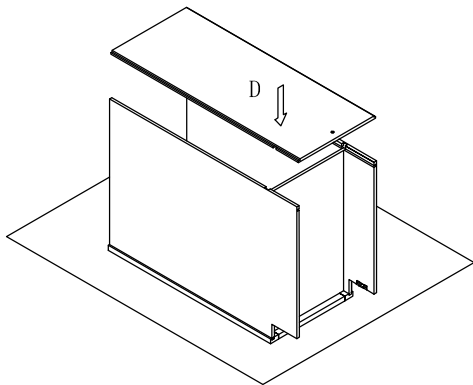

Step 5 : Install screw(5) Ø3.5x35mm into back panel (D).

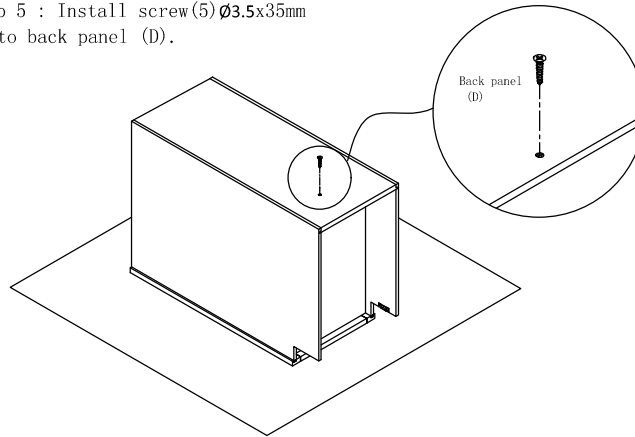


Step 6 : Install toe kick panel. Fit in the L-shape insert bracket from toe kick panel (E) into side panel (B) bracket and screw the bracket with (3) Ø3.5x14mm screw.

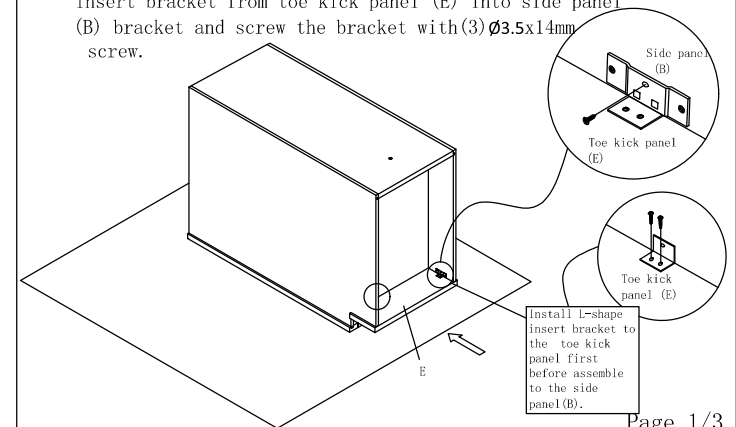


Base Cabinet Assembly Instruction

(Item:B09-B15)


Step 7 : Install back panel. Fit in the L-shape insert bracket from back panel (D) into side panel (B) and assembly the bracket with (3) $\varnothing 3.5 \times 14$ mm screw.

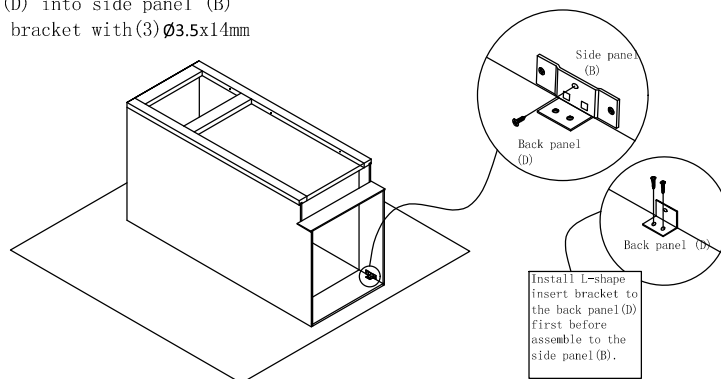


Step 8 : Install corner block. Install rainbow bracket to the side panel (B), front frame (A) and back panel (D) with the (4) $\varnothing 3.5 \times 16$ mm screw.

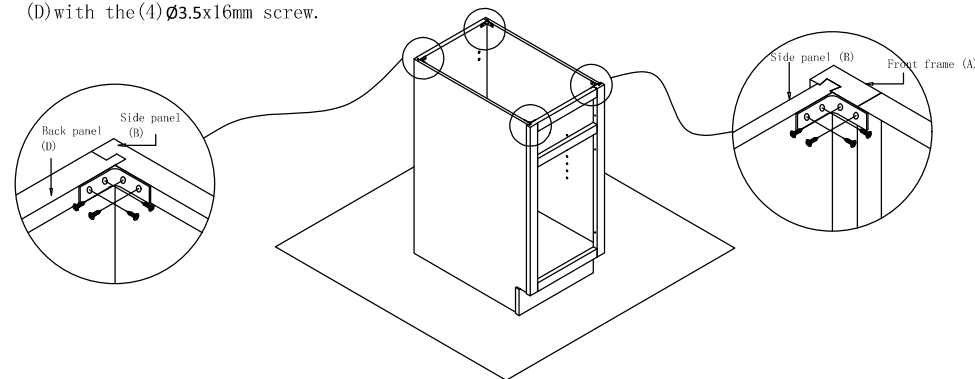


Step 9 : Install shelf clip. Install shelf clip to the side panel (B).

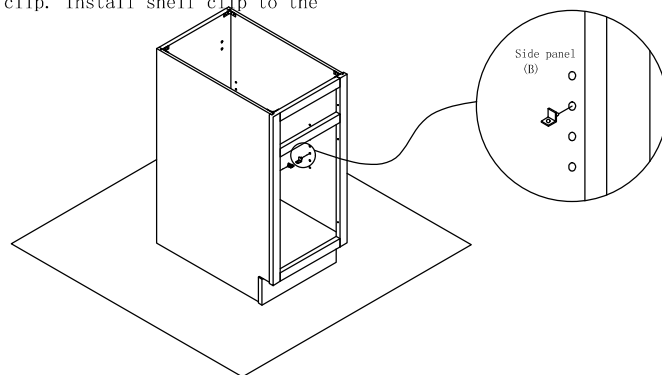


Step 10 : Install adjustable shelf. Put adjustable shelf (F) to the shelf clips.

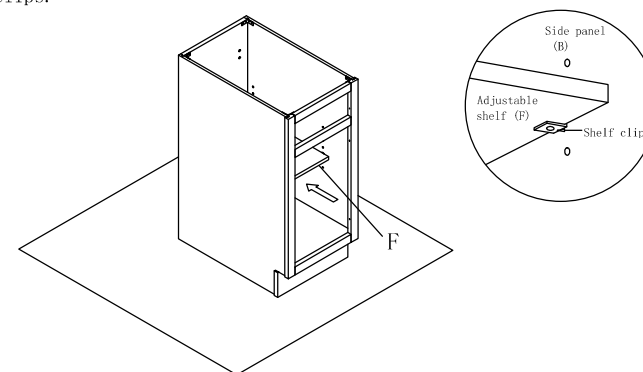

Step 11 : Install door panel (G). Screw the hinge to the front frame (A) with (2) $\varnothing 4 \times 19$ mm screw and door (G) with (1) $\varnothing 4 \times 16$ mm screw.

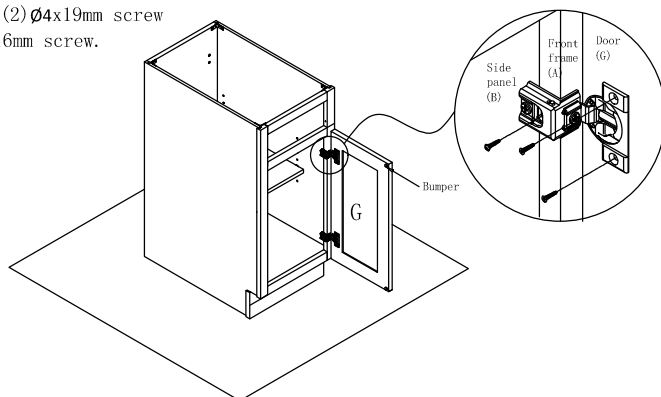


Step 12 : Install the drawer slide rear bracket. Screw the rear slide bracket to the back panel (D).

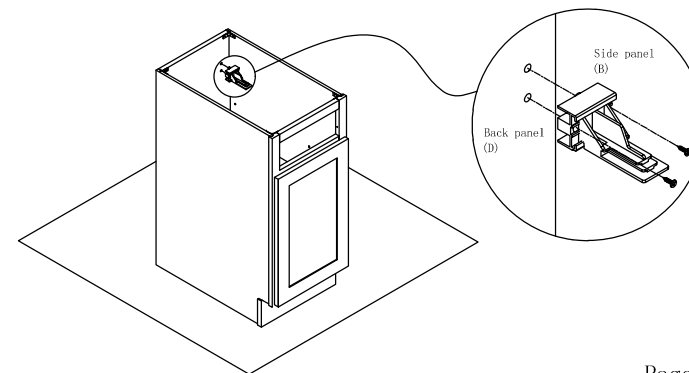


Base Cabinet Assembly Instruction

(Item:B09-B15)

Step 13 : Insert drawer slide runner to the rear slide bracket and screw the drawer side to the guide hole of front frame (A) and hole for drawer slide

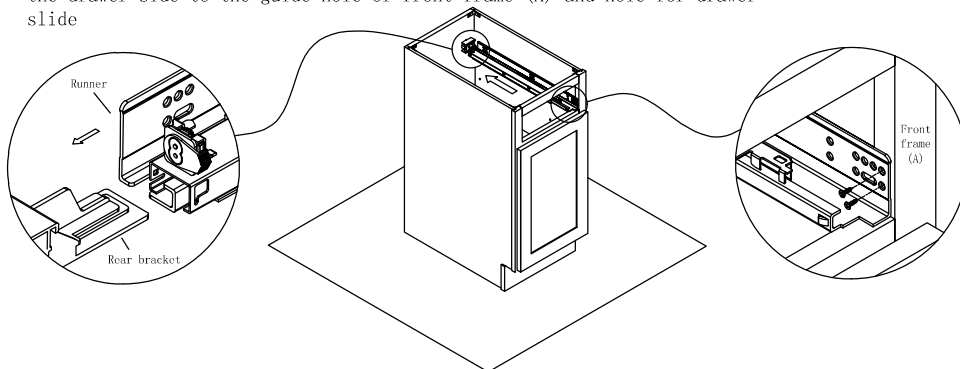

Step 14 : Put the drawer box on the drawer slide and push the drawer box to make the end of runner is lock to the hole of the drawer back panel. Complete the installation of the drawer box when your hear sound click which mean the locking device is locked on the bottom drawer hole.

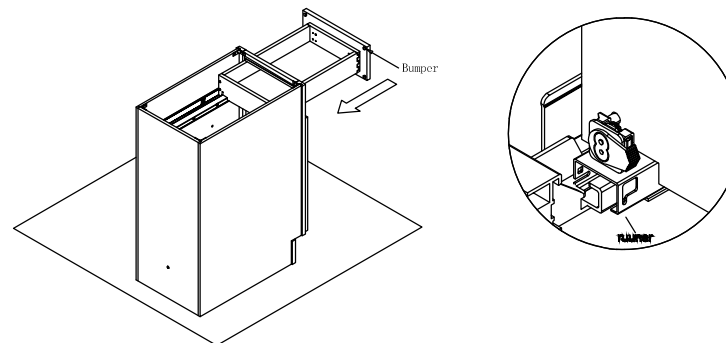

Step 15 : Finish installation of cabinet.

