







Tall Pantry Cabinet Assembly Instruction


(Item:WP3084 WP3090)

Hardware list	1 20pcs Ø4x16mm			2 10pcs Ø4x19mm			3 25pcs Ø3.5x14mm			4 16pcs Ø3.5x16mm			5 6pcs Ø3.5x35mm			6 10pcs 1-1/4"			7 8pcs 6mm		
	Flat head screw			Round head screw			Color galvanized screw with flat head			Color galvanized screw with flat head			Black screw with flat head			Hinge			Shelf clips		
																					
Assembly tools required	 Screw driver			 Rubber mallet			I Drawer box (3) H Adjustable shelf (2)			11 4pcs 40mmx40mm			10 4pcs Ø7			9 3set L-shape bracket			8 3set 22"		
										Bracket rainbow 90°			Bumper			L-shape bracket			Steel ball slide		
																					
Cabinet Part List	A	Front frame	B	Side panels(2)	C	Bottom panel(1)	D	Top panel(1)	E	Fixed shelf(1)	F	Back panel	G	Toe kick	J	Door (4)					

Step 1 : With front frame (A) of cabinet lay down on clean and soft surface then put glue into groove.

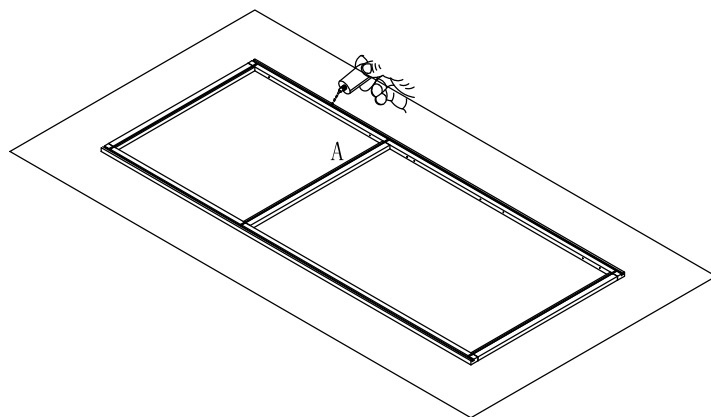


Step 2 : Install side panels. Insert side panel into groove of front frame (A) until side panel and front frame even.

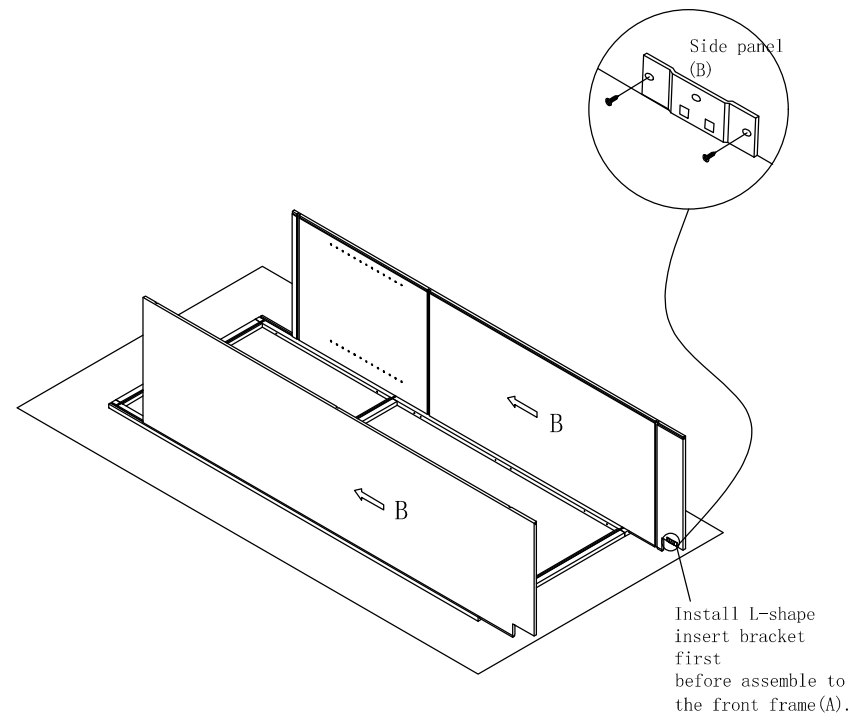


Tall Pantry Cabinet Assembly Instruction

(Item:WP3084 WP3090)


Step 3 : Install top&bottom panel and fixed shelf. Insert top panel(D) bottom panel(C) and fixed shelf (E) into groove of front frame (A) until it into the groove of front frame (A).

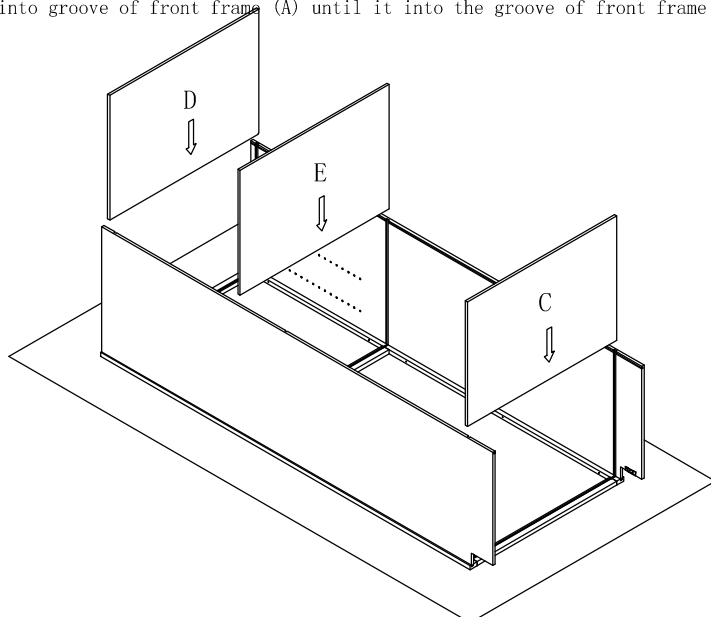


Step 4 : Install back panel(F).until bottom panel and top panel and fixed shelf into the groove of back panel.

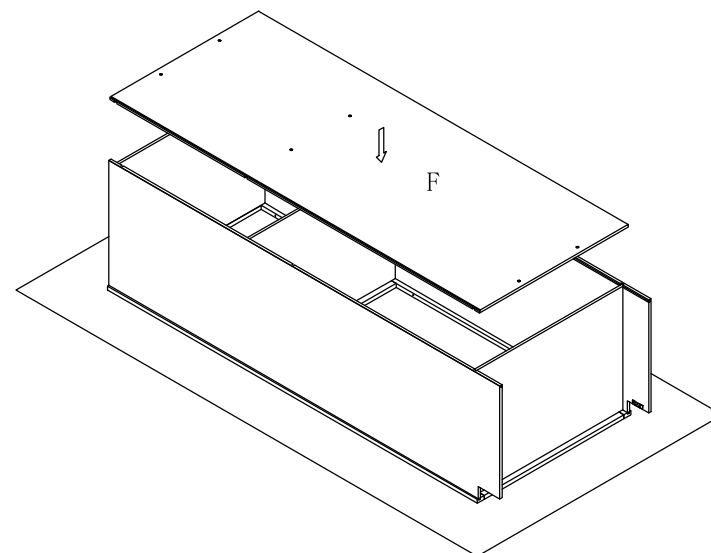

Step 5 : Install assembly screws(5) $\varnothing 3.5 \times 35$ mm into back panel (D).

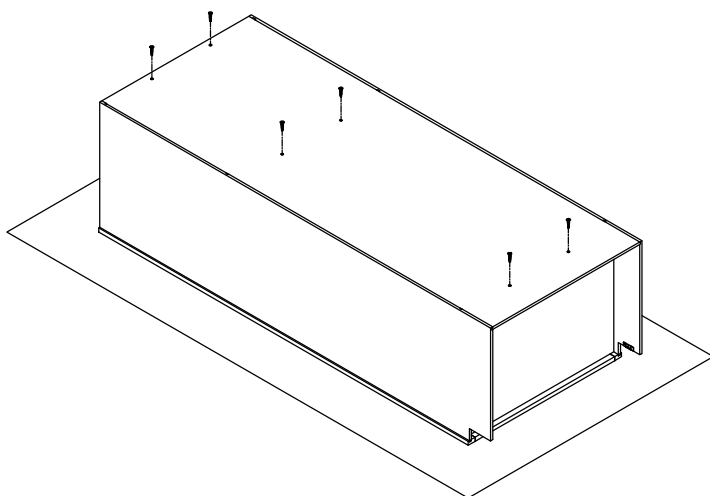


Step 6 : Fit in the L-shape insert bracket from front frame (A) into bottom panel (C) bracket and screw the bracket with(3) $\varnothing 3.5 \times 14$ mm screw.

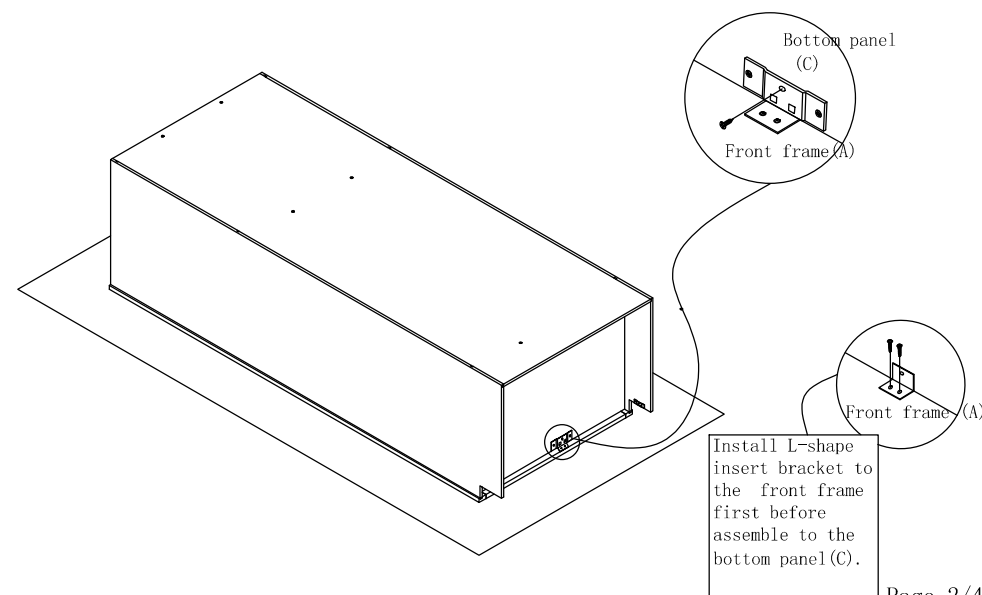


Tall Pantry Cabinet Assembly Instruction

(Item:WP3084 WP3090)


Step 7 : Install toe kick panel(G).Fit in the L-shape insert bracket from toe kick panel (G) into side panel (B) bracket and screw the bracket with(3)Ø3.5x14mm screw.

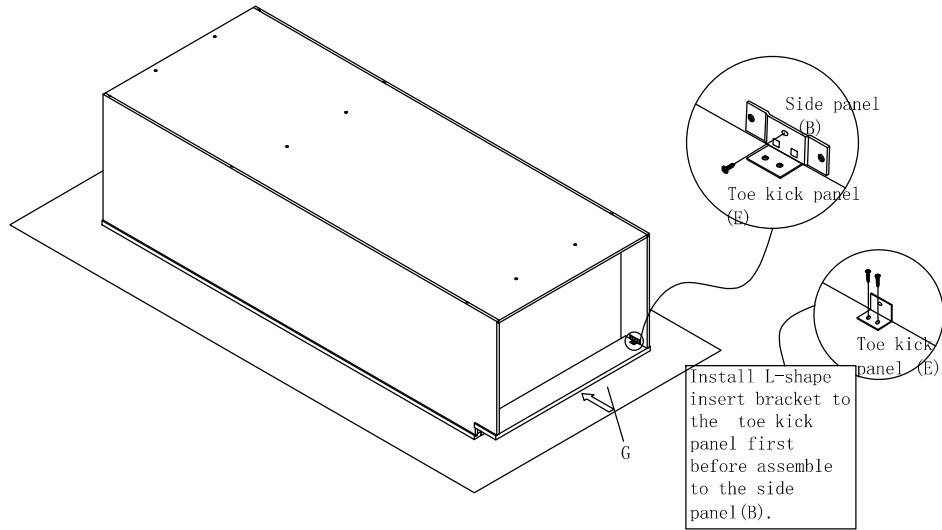


Step 8 : Install back panel. Fit in the L-shape insert bracket from back panel (D) into side panel (B) bracket and screw the bracket with(4) Ø3.5x16mm screw.

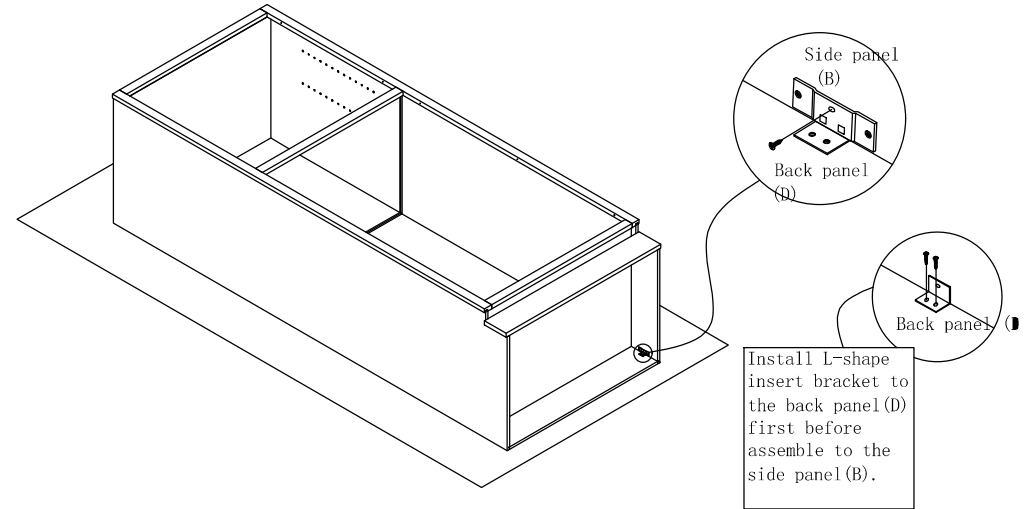

Step 9 : Install corner block. Install rainbow bracket to the side panel (B), front frame (A) and back panel (D) with the (3)Ø3.5x16mm screw.

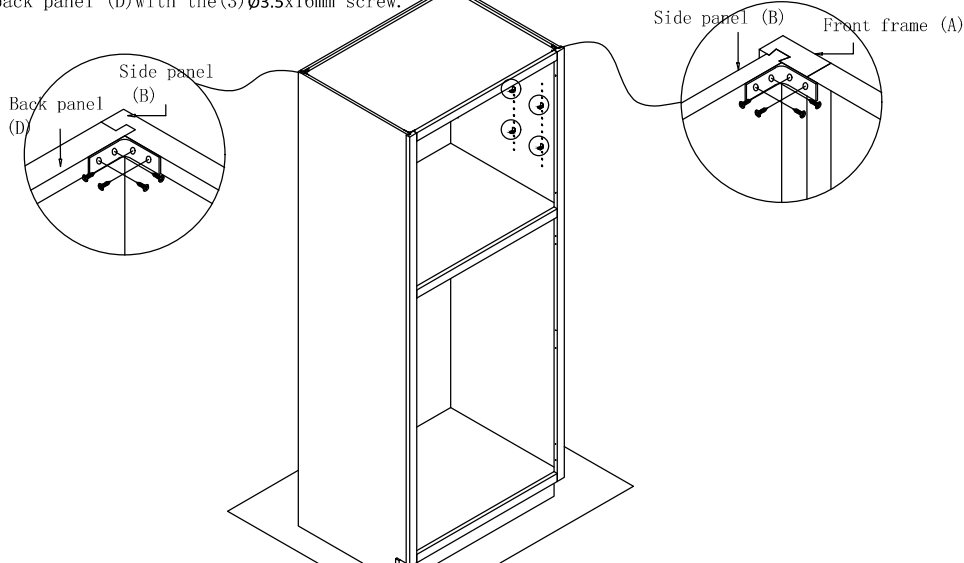




Step 10 : Install shelf clips and steel ball slide. Insert shelf clips into the side panels, then Screw the rear slide bracket to the back panel (F). Insert drawer slide runner to the rear slide bracket and screw the drawer slide to the guide hole of front frame (A) and hole for drawer slide, then screw the steel ball slide to the drawer side panel of drawer box.

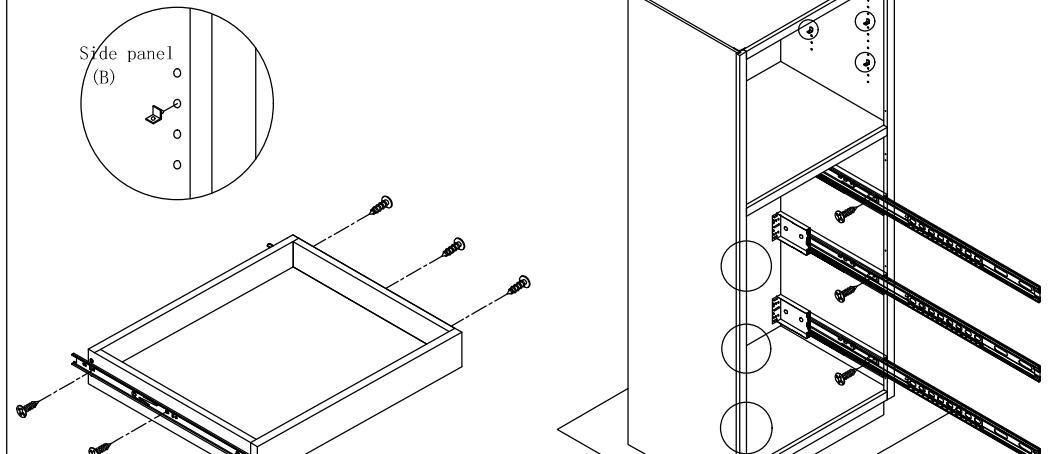



Tall Pantry Cabinet Assembly Instruction

(Item:WP3084 WP3090)

Step 11 : Install adjustable shelf(H) and drawer box(I).Put the adjustable shelf on the shelf clips and insert the drawer slide of drawer box to the drawer slide of side panels.

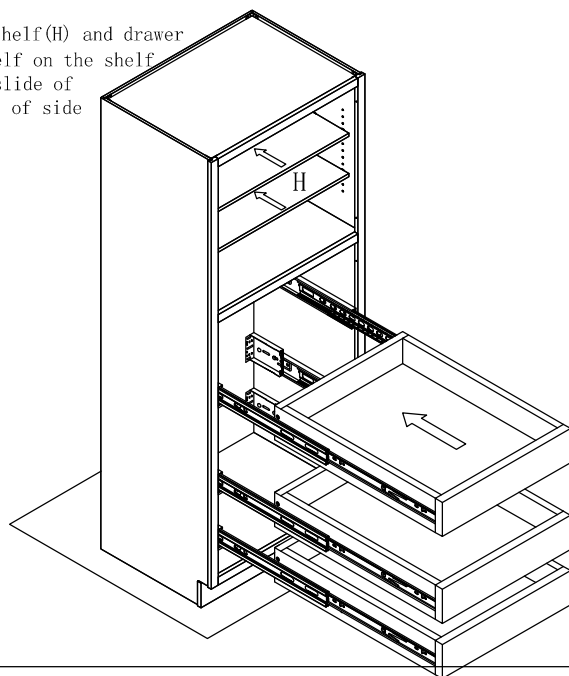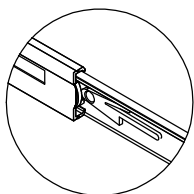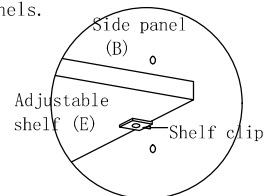

Step 12 : Install door panel(J).Screw the hinge to the door panel(J) and front frame(A).

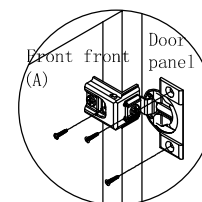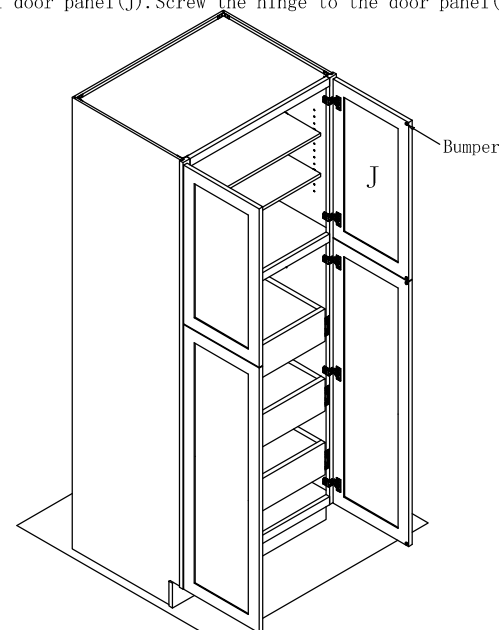

Step 13 : Finish installation of the cabinet.

